


We have found a gel superglue works best to mount the Stand-offs to the back of the acrylic or Pteg Sign Face

Mounting foot locations

Cut out boxes with Exacto Knife - mount pattern
Then mark locations, attach stand-offs and allow to cure

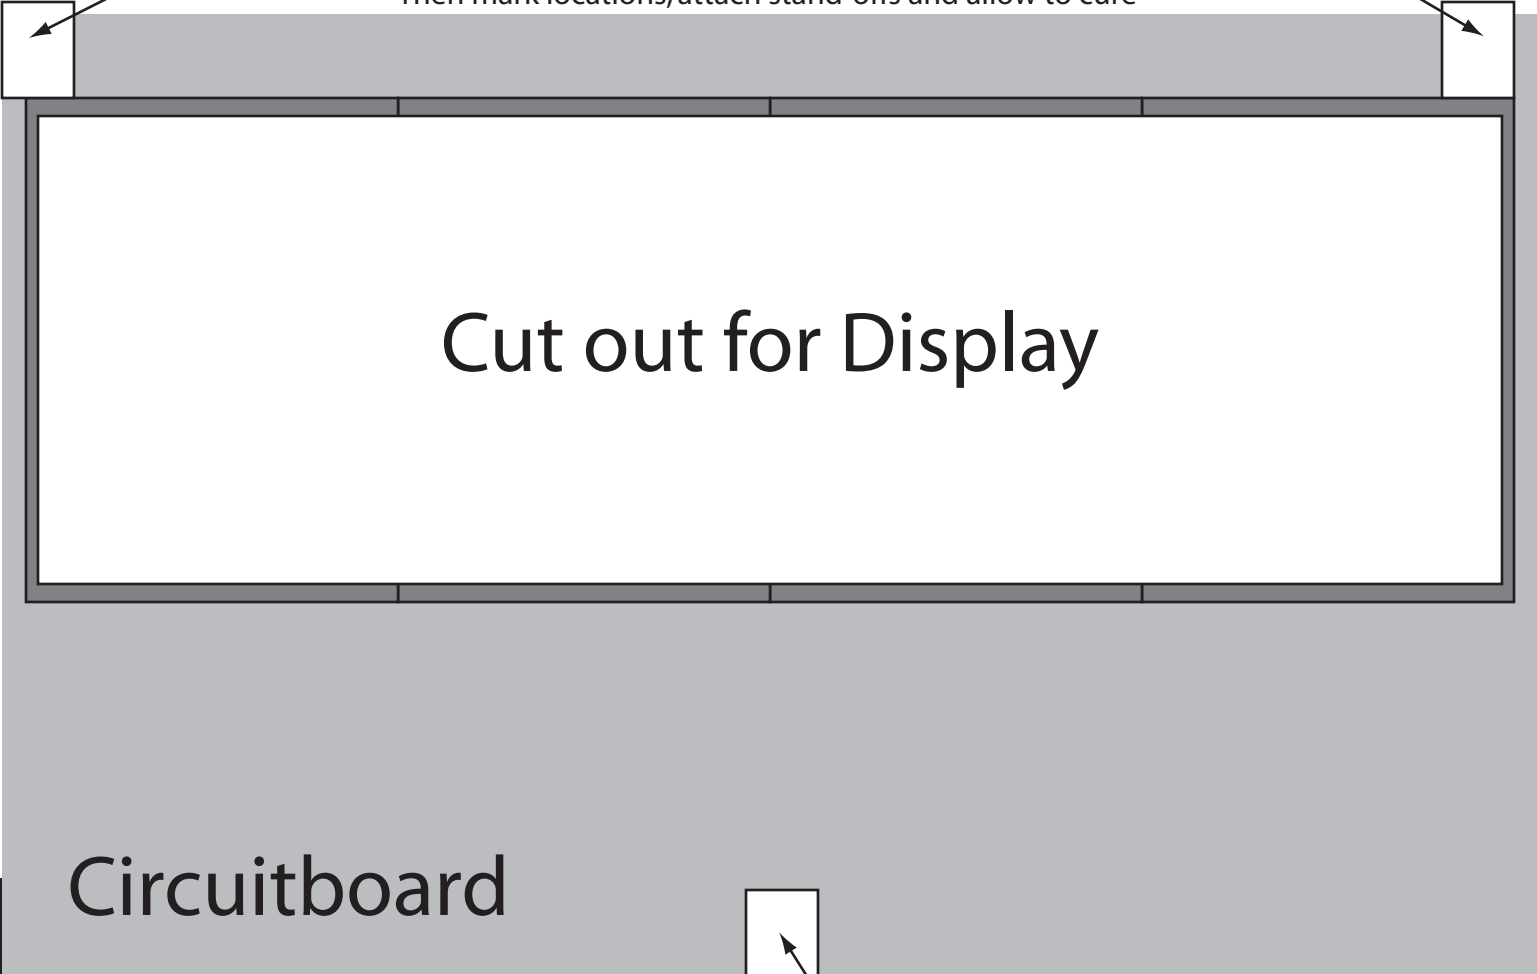

Remote
plug

Power Plug

Circuitboard

THIS SIDE UP (place on back of sign)

Mounting foot locations