



We have found a gel superglue works best to mount the Stand-offs to the back of the acrylic or Pteg Sign Face

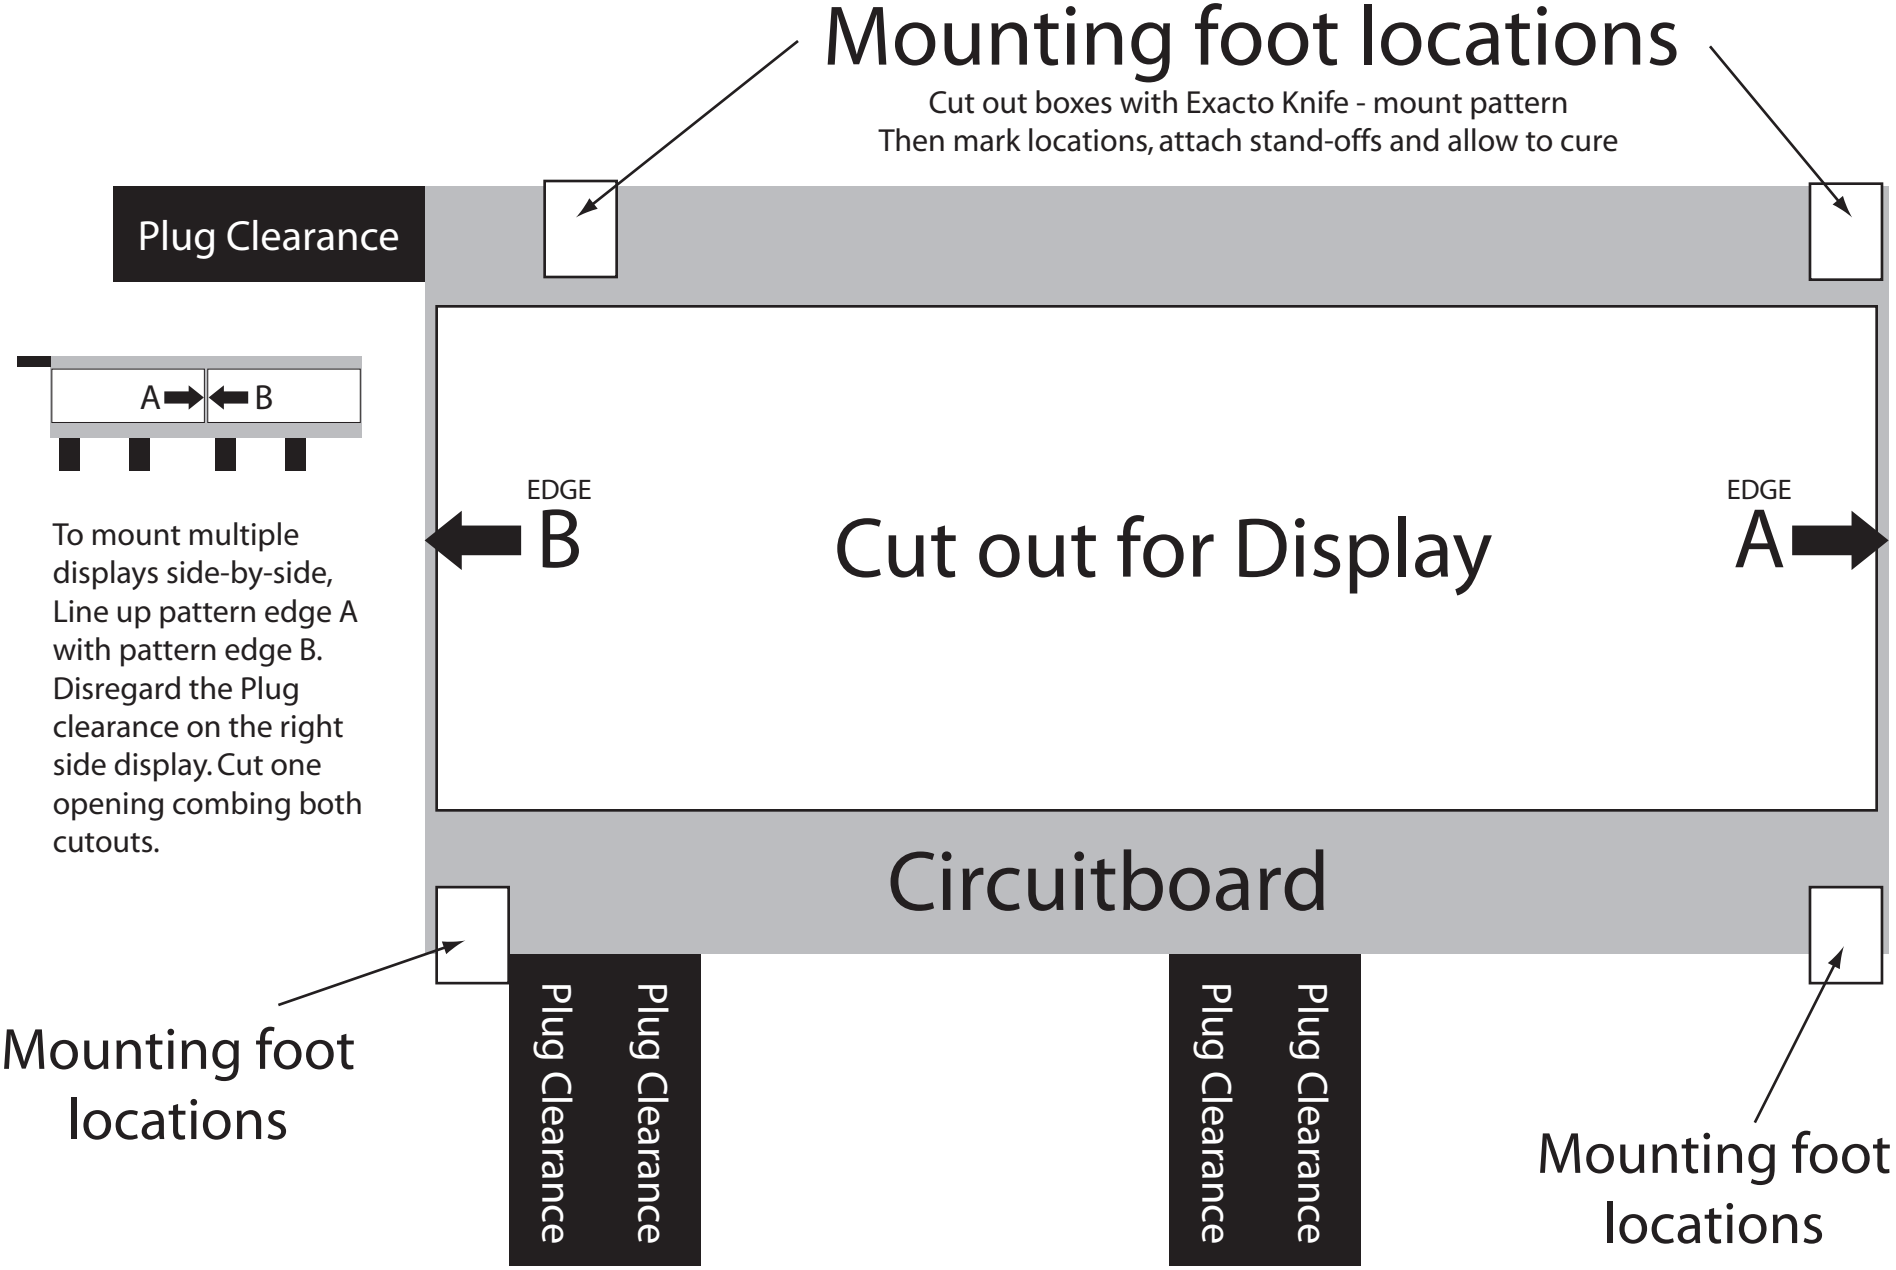

Mounting foot locations

Cut out boxes with Exacto Knife - mount pattern
Then mark locations, attach stand-offs and allow to cure

Plug Clearance

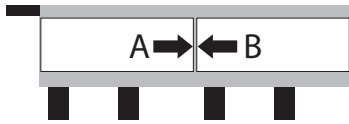

To mount multiple displays side-by-side, Line up pattern edge A with pattern edge B. Disregard the Plug clearance on the right side display. Cut one opening combining both cutouts.

Mounting foot locations

Plug Clearance
Plug Clearance

Plug Clearance
Plug Clearance

Mounting foot locations

THIS SIDE UP (place on back of sign)